









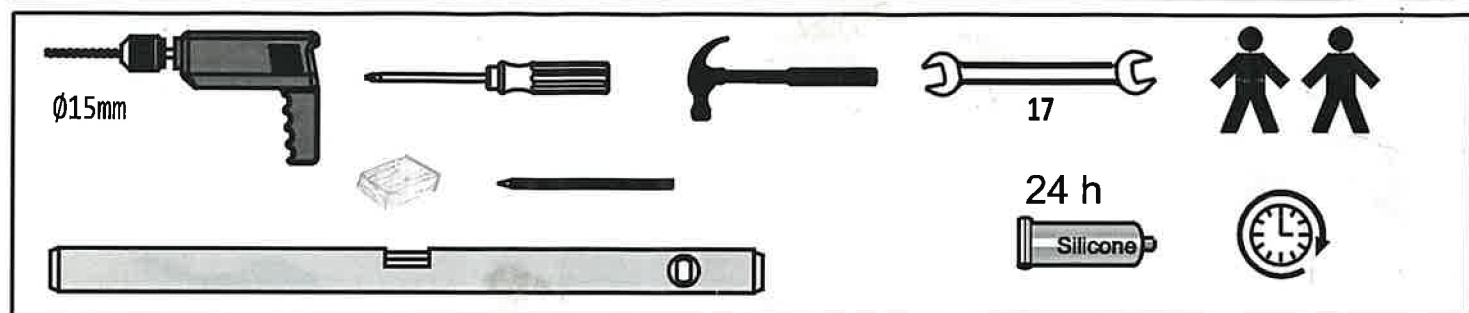

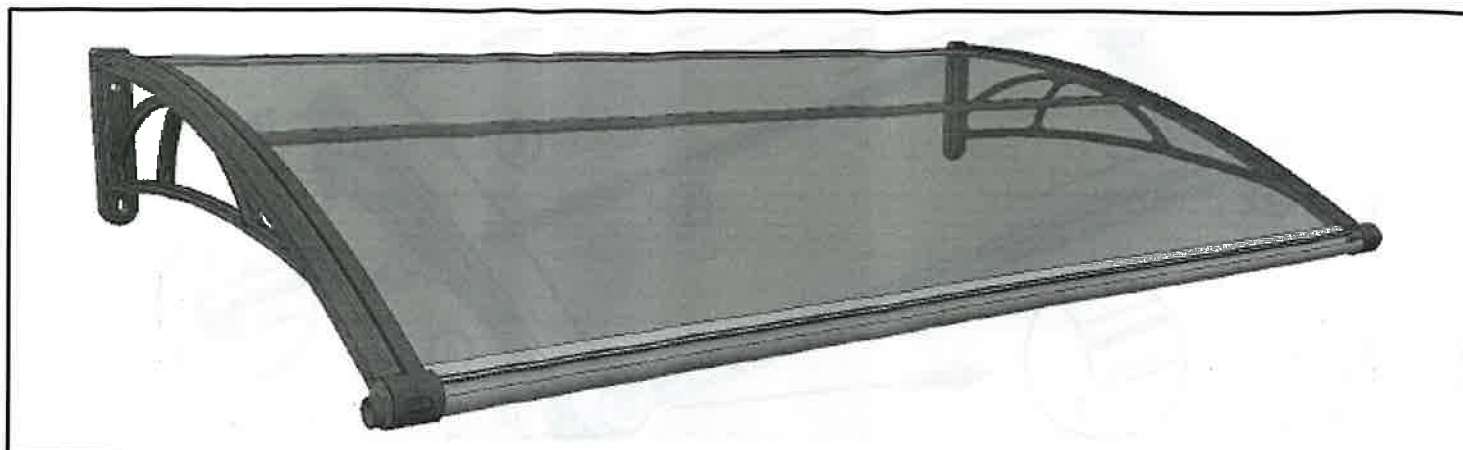

Montážní návod

Vchodová stříška Valtellina - šíře 1500 mm



1	 790x1450 mm	1x	4		2x			
2		1x	5		2x	6		4x
3		1x	7a		2x	7c		2x
			7b		2x	7d		2x
			8	